

40707

Ligature Resistant Wall Connector and Quick Disconnect Adaptor with Hand Held Shower

Description

Mental Health Hand Held Shower with Anti- Ligature Wall Connector and Quick Disconnect Adaptor.

Designed for assisted shower applications in behavioral health facilities, this unique shower connector allows care givers the option of bathing the patient with a hand held shower. Once finished the care giver can simply disconnect the adaptor and hand held shower leaving a safe bathroom environment once again.

Operation




1. Push in the ring on the mounted connector



2. Push in the hose and release the ring



3. The ring will “pop” out once the hose has been pushed fully home into the mounted connector. The shower is now ready to use

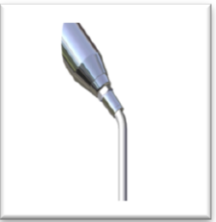

4. To release the hose, push the ring in and the hose will come out



Features

- Ligature resistant hand held shower adaptor, which allows for the easy removal of the hand shower after use.
- Durable chrome finish for easy cleaning and a homely look.



WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov


- Utilizes a quick connect fitting for a safe and reliable shut off and easy attach and release.
- Is able to be adapted to existing hose and hand held showers.

Warranty

1 year warranty: excludes damage to fitting from pieces of copper tube, plastic tube, sand, dirt or thread tape etc. Water conditions must comply with national standards and all fittings or valves will be subject to annual maintenance procedures.

40707 – Ligature Resistant Shower Hose

Dimensions

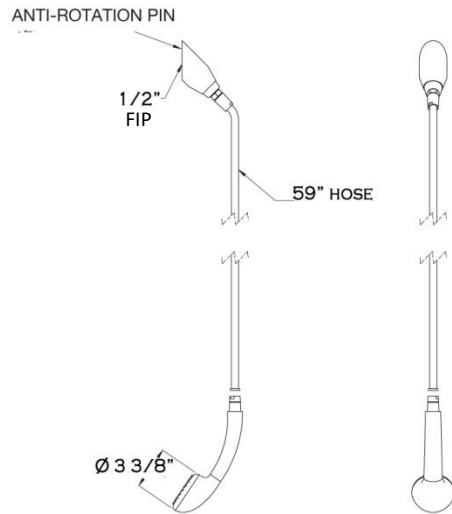

Model Numbers

Base Model Number (must specify)

- 40707** Ligature Resistant Shower Hose Assembly

Options

- U270050 Quick Connect for Biofil Hand Shower
- U270020 Biofil Hand Showers (10 pieces)